



Gedling Bouncy Castle Hire

Method Statement

1. Upon arrival, the driver will take note of any safety information or displays and adhere to the rules of the site at all times. If no specific rules are given for on site, the driver will adhere to the rules outlined in the highway code.
 2. The driver will ensure that whilst the vehicle is on a designated carriageway or road surface, the rules of that specific highway are bided by at all times.
 3. Should the vehicle be required to travel on any undesignated areas, such as verges or footways, the vehicle will travel at a maximum of 10 miles per hour with any beacon that the vehicle has fitted illuminated at all times. In these specific areas and/or other highly populated areas, the use of a banks person is recommended but not compulsory.
 4. The set-up area will then be inspected for suitability, at which time, the area the inflatable will cover will have any large stones or sharp objects removed & disposed of in a sensible & safe manner. If required by the hirer the staff will then await a CAT scan (**To Be Sourced Elsewhere**) to be carried out before continuing.
 5. The area will then be checked for suitable height & for any obstructions. I.e., cables, trees, lights. It will also be check for any gradient which will affect set up.
 6. A wind anemometer will be used to check wind speeds prior to set up of the inflatable/s, set up wind speed is recorded in the delivery document.
 7. The inflatable will then be laid out & unfolded into place. The cables will be laid out and connected to electric/petrol blower/generator as agreed prior to our arrival.
 8. The inflation device will then be checked, connected & switched on ensuring all vents are unobstructed, bent or twisted and fan blades clear of debris. The remaining vents on the inflatable will then be secured.
 9. The unit will now be inflated, ensuring that no one is on or near the inflatable.
 10. Then the various anchor points will be pegged in place using a minimum of 16mm x 380mm length steel anchor stakes at various points into the ground below at a 45 degree angle.
 11. The use of a manometer will now check the internal pressure of the inflatable ensuring the pressure is in line with manufacturer guidelines, the reading will be recorded in the delivery document.
- NOTE*** All anchor points must be used when the inflatable is being used outdoors. If the inflatable is to be used indoors sandbags will be placed at the anchor points however not all anchor points may be used. The anchorage system may be different depending on the surface type.
12. It is imperative that guests or other persons involved in the event do not encroach on the set-up area unless specifically requested to do so.



Unit 18 Colliers Business Park,
Cotgrave,
Nottingham,
NG12 3UL



07870672283



info@gedlingcastlehire.co.uk

Gedling Bouncy Castle Hire

Method Statement

NOTE* All equipment is to be erected as per Manufacturers/Health & Safety guidelines & under no circumstances can this be compromised in any way, regardless of aesthetics or the discretion of the venue/organizers.

13. Where necessary, barrier fencing, rope or tape will be used to cordon areas off, especially on public events.
14. When there is the use of petrol blowers/generators, barriers & safety fencing may be deemed necessary to seal the area off from access to the general public. Any refills to be carried out must be to the manufacturer's recommendations. Turn the generator/petrol blower off and allow to cool for 5 minutes then fill the tank cautiously using a funnel. Do not overfill. Other points that are to be followed are shown below:
 - No smoking, naked flames or sparks to be near the area.
 - Not to be operated by any untrained person.
 - Make sure the fuel cap is secured firmly on the fuel tank.
 - Any reserve fuel is to be stored in a safe secure well-ventilated area and in an approved container.
 - Petrol blowers/ generators are for outdoor use only in well-ventilated areas.
15. Once the inflatable(s) have been checked over by the event manager or delegated health & safety officer, the event may begin.
16. From this point operation of the inflatable(s) will follow the instructions outlined in the safety manual supplied or any other method statement provided, the adherence to supervision & monitoring instructions are the responsibility of the hirer. Unless Gedling Bouncy Castle Hire is providing staff to operate and supervise the items.
17. Upon completion of the event, the inflatables must be evacuated & an allocated member of staff will ensure that no participants are left on the item whilst deflation is in progress.
18. Once deflation has been completed, all anchor pegs, cables, blowers & generators will be removed from the site & placed back into the collection vehicle(s).
19. The inflatable will then be folded & rolled in an acceptable manner & transported to the vehicle, either by sack truck or wheel cart. When dealing with larger items, the collection vehicle may be required to drive to individual items for collection. Again, the vehicle will travel at a maximum of 10 miles per hour. In these specific areas and/or other highly populated areas, the use of a bank person is recommended but not compulsory & the rules of the site will be observed at all times.
20. The area will then be checked for debris & other accessories, which will be dealt with accordingly.
21. The delivery vehicle will then depart the site, in a similar manner to that described above, again taking note of any instructions given or signing in place.

This document was updated on 13th June 2023 and is reviewed when necessary or annually.



Unit 18 Colliers Business Park,
Cotgrave,
Nottingham,
NG12 3UL



07870672283



info@gedlingcastlehire.co.uk